

# ABB MC

HO  
SUPPORT  
HOLDER

CNOMO  
DIN  
NAAMS

# HO

## Support pilote Locating pin holder


CNOMO – DIN




W 050 012 908




W 050 012 909

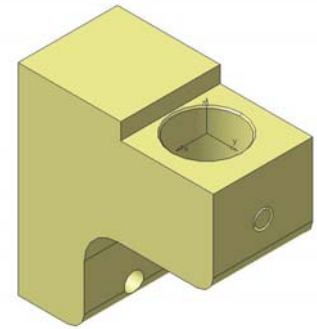


W 050 012 912

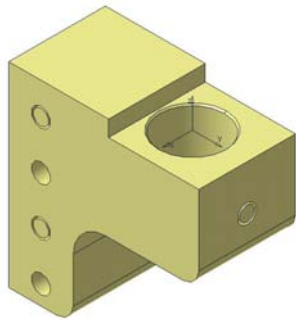

W 050 012 913

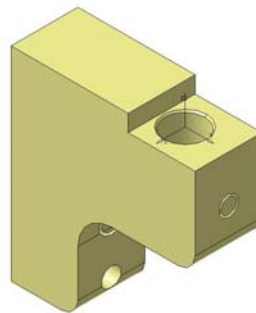

W 050 012 915

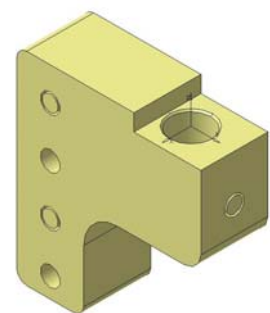


W 050 012 916

UTILISATION JUSQU'À

ÉPUISEMENT DU STOCK


ENSUITE UTILISATION DE

~~W050012950 – W050012951 ET W050012952~~

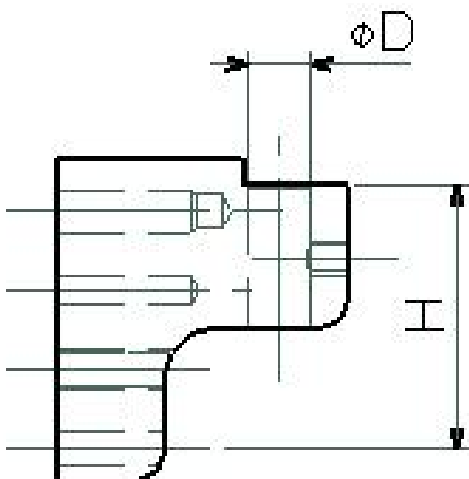


HO : Holder - Support			
N° Standard	D= mm	H= mm	W= Kg
W 050 012 908	30	50	
W 050 012 909	30	50	
W 050 012 912	20	50	
W 050 012 913	20	50	
W 050 012 915	12	50	
W 050 012 916	12	50	


## Support pilote Locating pin holder CNOMO – DIN

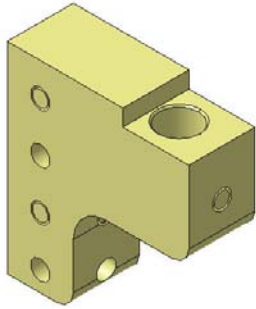


W 050 012 950

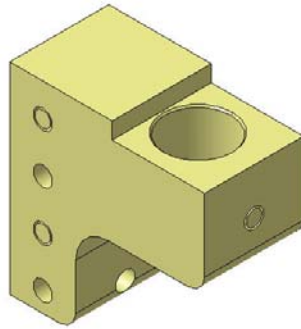

W 050 012 951

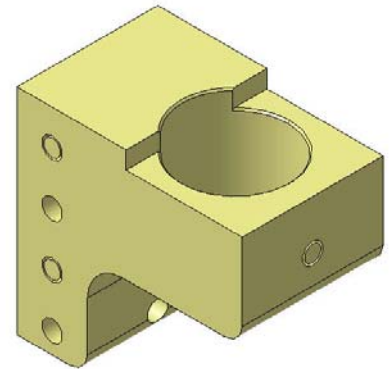

W 050 012 952

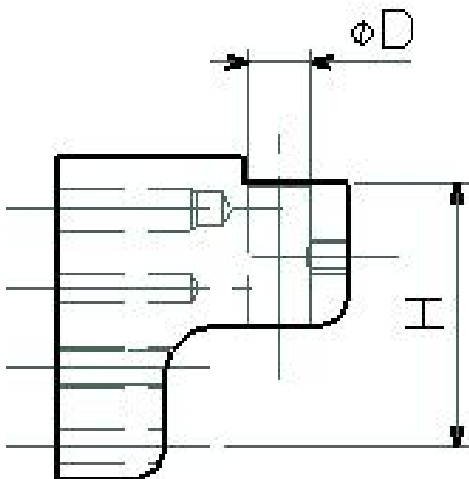

HO : Holder - Support		
N° Standard	D= mm	H= mm
W 050 012 950	12	50
W 050 012 951	20	50
W 050 012 952	30	50

# HO

## Support pilote mobile déporté Offset locating pin holder


CNOMO – DIN




W 050 011 157




W 050 011 158

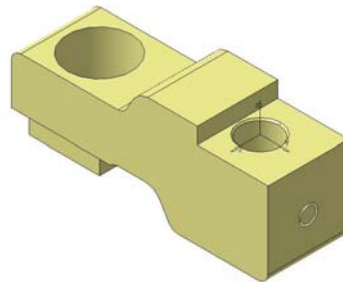


W 050 012 910

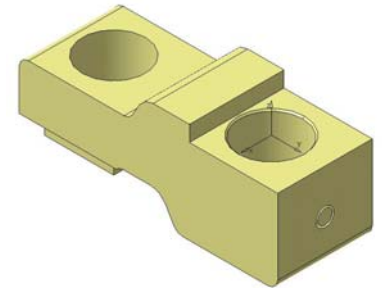


W 050 012 911

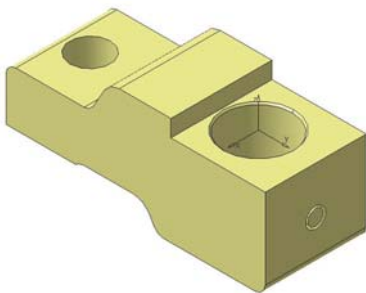

W 050 012 914

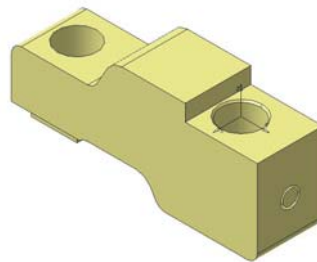

W 050 012 917

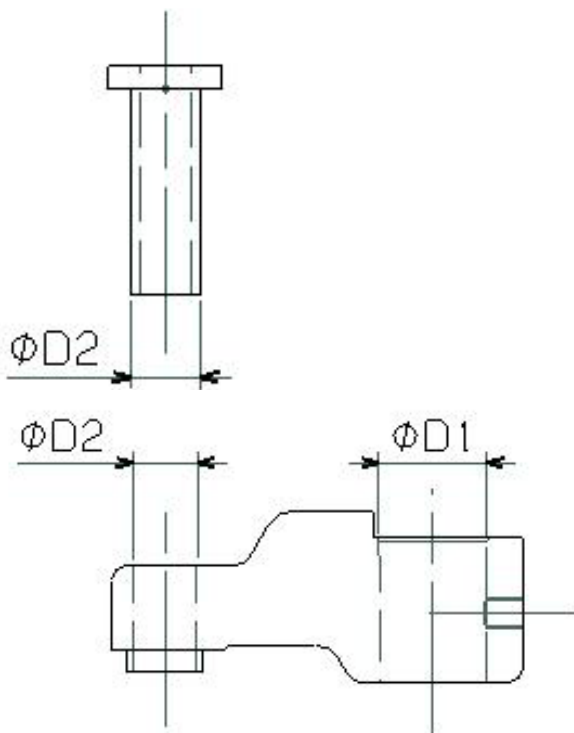


HO : Holder - Support			
N° Standard	D1= mm	D2= mm	W= Kg
W 050 011 157		20	
W 050 011 158		12	
W 050 012 910	12	20	
W 050 012 911	20	20	
W 050 012 914	20	12	
W 050 012 917	12	12	


# HO

## Support pilote 3 trous Locating pin holder 3 holes


NAAMS

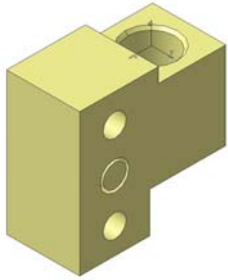

APR010M

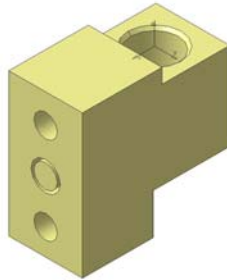

APR020M

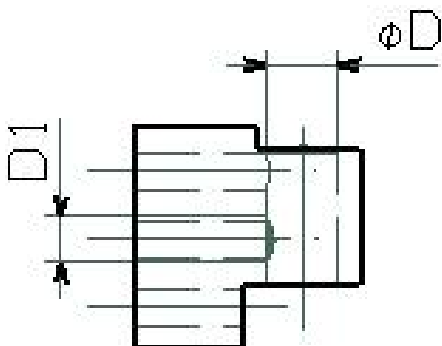


HO : Holder - Support			
Code NAAMS	D= mm	D1= mm	W= Kg
APR010M	16	M10	
APR020M	16	M10	


# HO

## Support pilote 4 trous Locating pin holder 4 holes


NAAMS

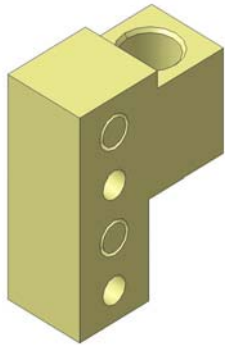


APR030M

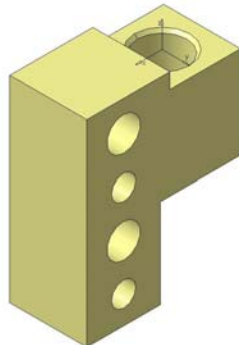

APR032M

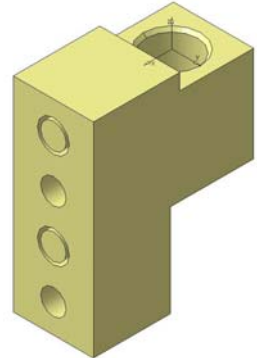

APR040M

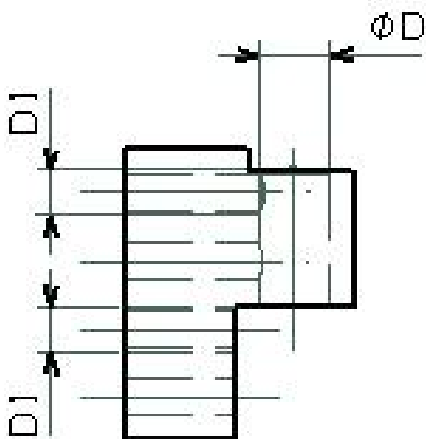

HO : Holder - Support			
Code NAAMS	D= mm	D1= mm	W= Kg
APR030M	16	M10	
APR032M	16	11	
APR040M	16	M10	